

SPECTRUMSMT.COM
info@spectrumsmt.com



Call USA: +1 (855) 261 1805
Call UK: +44 0844 556 1203

US • UK • EU

SMT MACHINE SPARES

Yamaha SMT Machine Spares

YG88R-MG-8R

Part numbers and descriptions

Working with our partners worldwide we have access to a large inventory of original machine spares for both current and older machines. In many cases we have stock of obsolete parts for machines no longer supported by the manufacturer. For your convenience we have listed, in an easy to read format, the spares offered by the manufacturers. We also repair and exchange many spares parts.

If you cannot locate what you need from your main dealer or you are interested in making some savings then please feel free to contact us for a quote and availability.

YOUR PERFECT SMT PARTNER

Yamaha SMT Machine Spares - YG88R-MG-8R

AC servo motor
9498 396 00688

AC servo motor
9498 396 00602

AC servo motor
9498 396 00620

AC servo motor
9498 396 00680

AC servo motor
9498 396 01070

AC servo motor N1-3
9498 396 01248

Ac servo motor R1-3
9498 396 01247

AC servo motor Z1-3
9498 396 01246

adjustment tool kit
9498 396 00748

AIR HOSE 4MM ORANGE
5322 530 20878

AIR HOSE 8MM ORANGE
5322 530 20866

AIR JOINT
5322 526 10649

BALL (D 1.5)
9965 000 05421

Ball screw X-axis
9498 396 00600

Ballscrew
9498 396 02391

Ballscrew W (440)
9498 396 02397

BEARING (79M8ADF)
9965 000 04792

BEARING (WBC5-9ZZA)
9965 000 04791

BEARING (WBC7-13ZZA)
9965 000 04787

Bearing FNC spline
9498 396 01238

bearing N axis shaft
9498 396 01229

Bearing N-axis shaft 1
9498 396 01230

BEARING, ORION W-AXIS
5322 520 10768

BELT H-MOTOR
5322 358 10269

belt, N axis
9498 396 01213

BRACKET GAS DAMPER
5322 402 10359

BRAKE MAGNETIC
5322 281 11068

C.CABLE ASSY
9965 000 09060

CABLE, FIBER SENSOR
5322 132 00032

Cable, Smema 3.5m
9469 390 02790
EWW-SMEMA-3.5

Calibration unit
9498 396 01404
For Calibrating Force Control

CAMERA CABLE L=6M
9965 000 10353

CAPACITOR
9965 000 09074

CCD CAMERA
9965 000 09059
Component and Fiducial

CERAMIC CHIP FAMF
9498 396 00741

CIRCLIP (1 PC)
5322 530 70526

CIRCLIP 0.8MM
9965 000 09048

Circuit protector
9498 396 01095

Circuit protector QF32
9498 396 01351

Circuit protector QF41
9498 396 01352

Collar, sensor
9498 396 01174

CONTACTOR 1 (KM 10)
5322 280 10392
Safety Relay for Servo Power

COUPLING
5322 528 11374

COUPLING, STEEL
5322 526 40882

COUPLING, X-AXIS
5322 528 11354

COUPLING,UP/DOWN
5322 528 11004

Cover
9498 396 01092

Cover 9-1
9498 396 01006

Cover s-view camera
9498 396 01234

Yamaha SMT Machine Spares - YG88R-MG-8R

Cover, 9-1 front
9498 396 00734

Cover, 9-1 rear
9498 396 00735

Cover, light unit
9498 396 00637

Cylinder (FES24)
9498 396 00711

Cylinder (sub stopper)
9498 396 02261

Cylinder assy
9498 396 00635

Cylinder assy (Stopper)
9498 396 02348

Cylinder assy (Stopper)
9498 396 02349

D-power board assy
9498 396 00594

DC motor assy
9498 396 00677

Dead-mans switch
9498 396 00730

Drive Roller Unit
9498 396 03218

driver board assy
9498 396 00590

Dust box
9498 396 00710

DUSTBOX (sATS)
9498 396 00233

Ejector assy
9498 396 01195

ELBOW JOINT BM/12
5322 395 90955

Element
9498 396 02331

EMG switch
9498 396 00726

EXTENSION TYPE H FOR THK
9965 000 02775
120mm angled extention tube

EXTENSION TYPE P FOR THK
9965 000 02766
Pointed tip for external application

Fan-motor, head assy
9498 396 00727

FDR LED board 10 port
9498 396 00669

FDR LED board 8 port
9498 396 00670

FEEDER FLOATING SENDER
9965 000 10379

FEEDER PLATE ADJ. TOOL
5322 395 10845
Tool to align the feeder pick up position

FES20 INTERF. BOARD
9965 000 15822
FES Board when machine has been equipped with at least 1 FES interface

Fiber nozzle position
9498 396 00731

Fiducial light assy
9498 396 00752

FILTER ME05MA-F
5322 360 20081
Primary vacuum filter for all placement heads

Filter, blow station
9498 396 01265

FILTER, METAL CAP
5322 462 11025

FOCUS ADJUSTER
5322 395 10275
Older Style Focus Adjuster

Fuse, 4 (QF11)
9498 396 00627

FUSE, CP30-BA(1P-10A)
5322 280 30067

FUSE, CP30-BA(3P-10A)
5322 252 11238
QF31

FUSE, CP30-BA1P1-M1A
5322 252 11139
QF22 M Series

GASKET
5322 466 11133

GEAR MOTOR R
9965 000 04535

GEAR, HEAD R
9965 000 04536

Glass cover fix cam
9498 396 01233

Glass QFP 16p
9498 396 00755

Glass QFP 68P
9498 396 00754

Glass, cover
9498 396 00785

Grease Molybdenum
9498 396 01179

Grease, Krytox GPL225
4035 114 01320
Moving orings and seals

Gripper nozzle 22BN
9498 396 01547
with rubber tip part of PA2962-36

Yamaha SMT Machine Spares - YG88R-MG-8R

Gripper nozzle 22M5 9498 396 01542 part of PA2962-36	HNS, Y-flex SRVA 9498 396 01011	LED DRIVER BOARD 9965 000 09092 PCB Located inside Light Unit
Gripper nozzle 6ALB 9498 396 01807 part of PA2962-36	Hook spanner SV camera 9498 396 00663	LENS 095 5322 381 12109
Gripper nozzle 6LE 9498 396 01541 part of PA2962-36	HOSE (BLACK) 5322 530 20823	LEVELING BOLT ASSY 9965 000 09012
Gripper nozzle 6LG 9498 396 01540 Part of PA2962-36	I/O Conveyor board assy 9498 396 00593	LIGHT ADJUSTER 5322 395 10274 Light_dark gray Light adjuster tool
GUIDE (445) 9965 000 10355	I/O head board assy 9498 396 01236	Light tower 9498 396 00728
GUIDE BLOCK, L 9965 000 05946	ID READER BRD (8) 9498 396 00538	Locate pin 9498 396 01208
GUIDE BLOCK, R 9965 000 05947	IO TF board assy 9498 396 00736	M2X4 FLAT HEAD (10 PCS) 5322 502 14662 FNC Pinion Gear Screw
GUIDE, STEEL 9965 000 16794	JIG PIN R 9965 000 05441 For R Position pin	MAGNET CATCH 5322 693 22792
HARNESS 9965 000 09039	Jig, ITF Feeder-plate Calibration Tool 4022 591 74271 Tool to align the feeder pick up position	Main light, coax assy 9498 396 00640
HARNESS 9965 000 09037	JOINT 5322 395 90946	Main light, main assy 9498 396 00638
HARNESS 9965 000 09033	JOINT 5322 528 11356	Main light, sub cx assy 9498 396 00639
Harness, Y flex I/OA 9498 396 01411	JOINT TL8-01 5322 395 90944	Main side light 9498 396 00636
Harness, Y-flex X1M 9498 396 01413	JOINT, TSH8-01 5322 395 90945 8mm air line	Mains switch 9498 396 00750
Head servo board assy 9498 396 01237	JOINT, Y 4MM 5322 526 41007	Mother board 9498 396 00585
HINGE 2 5322 417 11366	KEYBOARD-E 9965 000 09021	MOUSE 9965 000 09023
HINGE, ASSY 5322 417 11247	Leaf spring adj tool 9498 396 01356	MUFFLER 5322 360 20106

Yamaha SMT Machine Spares - YG88R-MG-8R

MUFFLER KM-06 5322 693 91716	O-RING (SS-048) 9965 000 04803	PIN CONTACT (5 PCS) 5322 268 10315 Male Pins for connector 5322 268 40427
Multi camera FOV35 9498 396 00632	O-RING (SS-065) 9965 000 04754	PIN WRENCH ASSY 9965 000 05440
Multi camera FOV54 9498 396 00633	O-RING AIR INLET (1 PC) 5322 530 10292	PINION, Z AXIS 9965 000 09102
NOISE FILTER 9965 000 01331	O-ring locate pin 9498 396 01183	PLUG AIR 9965 000 04485
Nozzle 221F assy 9498 396 01221	O-ring nozzle 224F 9498 396 01185	PLUG HOUSING 5322 268 40425 Uses Pins 5322 268 20198
nozzle 222F assy 9498 396 01222	O-RING TYPE4 (5 PCS) 5322 530 51359	POWER SUPPLY 9965 000 09495 GS21
Nozzle 223F assy 9498 396 01223	Packing 9498 396 01184	
Nozzle 224F assy 9498 396 01224	Packing 9498 396 00762	
Nozzle 225F assy 9498 396 01225	PACKING 5322 466 62416	
Nozzle 226A assy 9498 396 01226	PACKING (KSYA-3) 9965 000 04797	
Nozzle 226F assy 9498 396 01227	PACKING (KSYA-7) 9965 000 04796	
Nozzle 229F assy 9498 396 01228	PACKING (KSYP-11) 9965 000 04795	
Nozzle holder 9498 396 01220	Packing locate pin 9498 396 01187	
O RING, P4 (FOR TYPE 13) 5322 530 51373	Packing, air joint 9498 396 01263	
O-RING 5322 530 10545	Packing, locate pin 9498 396 01189	
O-RING (SS-025) 9965 000 04804	Packing, N-shaft 9498 396 01190	
O-RING (SS-038) 9965 000 04805	Pin 9498 396 00966	